


FIRST-TIME USE OF H'DDI PORTABLE - GUIDELINES



1. Before the first-time use, remove the internal filter from H'DDI Portable Water Ionizer. Unwrap the packaging of the internal filter.

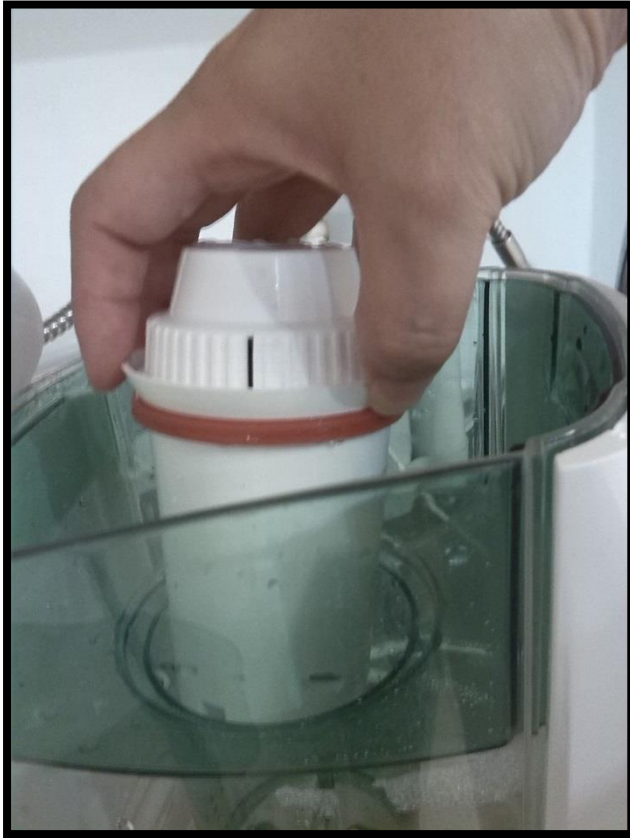

2. Rinse the internal filter with running water to clean the carbon residue before first-time use.



3. After rinsing, place the internal filter back to the H'DDI Portable Water Ionizer.

FIRST-TIME USE OF H'DDI PORTABLE - GUIDELINES



4. Take the water container out of the H'DDI Portable Water Ionizer.



5. Fill the water container with clean, filtered water from the top.



6. After filling it with clean, filtered water, return the water container to the H'DDI Portable Water Ionizer.

FIRST-TIME USE OF H'DDI PORTABLE - GUIDELINES



7. Close the lid after the water container along with the internal filter is securely placed back into the H'DDI Portable Water Ionizer.



8. Plug in the electrical cord. Place a glass below the dispensing outlet & press the 'on' button in the centre to dispense alkaline water for drinking.



9. While the ionizer is on, press the 'Alka' button to select your preferred Alkaline pH level (either High or Low).

FIRST-TIME USE OF H'DDI PORTABLE - GUIDELINES



10. When the “Alka” button is pressed, alkaline water will be dispensed from the dispenser outlet, ensure a glass is placed below it to collect the alkaline water for drinking.



11. At the same time, when it is on ‘Alkaline Mode’, the Acidic Water will be dispensed into the green coloured container at the bottom of the water ionizer.



12. The Acidic Water collected in this green coloured container can be used to sanitize cutlery, disinfect light wound, and cleaning as Acidic Water helps kill bacteria. It can be used for a face wash, as it is also a natural astringent.
ACIDIC WATER IS FOR EXTERNAL USE ONLY.

NOTE: On the contrary, if the “Acidic” Button is pressed, a beeping sound can be heard. The Alkaline Water will be dispensed into the green coloured container at the bottom of the water ionizer, while the Acidic Water can be collected with a glass or other container.